

ERROR CODES

0	Normal Operating Condition
1	Reverse Polarity
2	Open Ground
3	High Voltage (line 1 above 132V)
4	Low Voltage (line 1 below 104V)
5	High Voltage (line 2 above 132V)
6	Low Voltage (line 2 below 104V)

Report any above issues to Campground Mgr.

7	High Frequency (above 69Hz)
8	Low Frequency (below 51Hz)
9	Data Link Down
10	Service Surge Protector

Contact Tech Support for 7 - 10 Codes