


240V/50A Replacement Receptacle

Instructions:

1. Strip outer insulation back 5 inches; cut black and red conductor back to 3 inches; and green wire back to 2 inches. Next, strip each conductor insulation back ½ inch.
2. Remove receptacle cover and strain relief.
3. See Picture. Install black wire under black set screw and tighten. Repeat process for red, white and green wires.
4. If using 8 AWG cable, use the added strain relief. If using 6 AWG cable, *do not* install strain relief.
5. Attach cover, and install screws.

WARNING: Failure to wire as instructed above can result in personal injury and could damage attached equipment. Should be installed by a qualified person or an electrician.

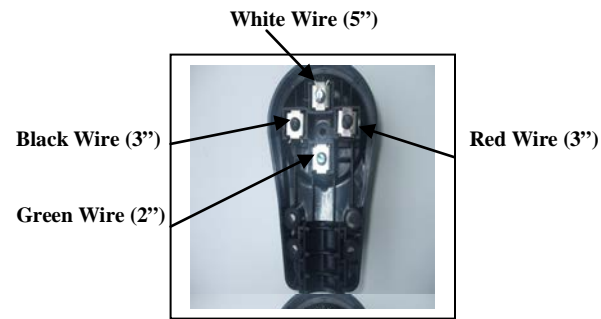

Progressive Industries, Inc.
Morrisville, NC 27560
(919) 462-8280
www.progressiveindustries.net